

Dear Customer,

This Quick Start Guide is enclosed with detailed dishwasher Operating Instructions. Before using the appliance carefully read the Operating Instructions, especially guidelines for safe use.

Before plugging your dishwasher into the mains power, remove the safety packaging. Do not start the dishwasher before it is properly set up.

1 Turn on the appliance

- Open the door, Press the Power button.

2 Dispense detergent

- Press the latch to open the detergent dispenser.
- Add detergent to the dispenser.

3 Check the special salt level

- Add special salt to the dispenser when the corresponding indicator on the control panel comes on.

4 Load the dishes

- Remove food leftovers from the dishes
- Place the dishes in the baskets according to loading guidelines.
- It is recommended to load the lower basket first, then the upper basket.

5 Select the wash programme

- Choose a program, the response light will turn on. Then close the door, the dishwasher will start its cycle.

6 Start your dishwasher

- Open the dishwasher door.
- The dishwasher will start a wash programme.

7 Turn off the appliance

 
 
- Turn the appliance off using the On/Off button.

8 Remove dishes from the appliance

- When the dishwasher is off, open the door and wait about 15 minutes before removing the dishes. This will also facilitate the drying process. Hot dishes are more susceptible to cracking.


9 Features and components

- Spray arms
- Cutlery basket
- Upper basket
- Inner tube
- Lower basket
- Salt container
- Detergent dispenser
- Mugs and cups shelves
- Main filter
- Water supply hose connection
- Water drain hose
- Regulator

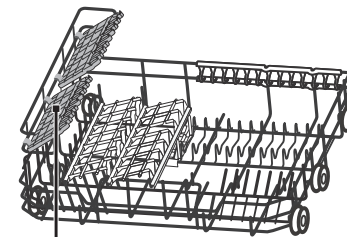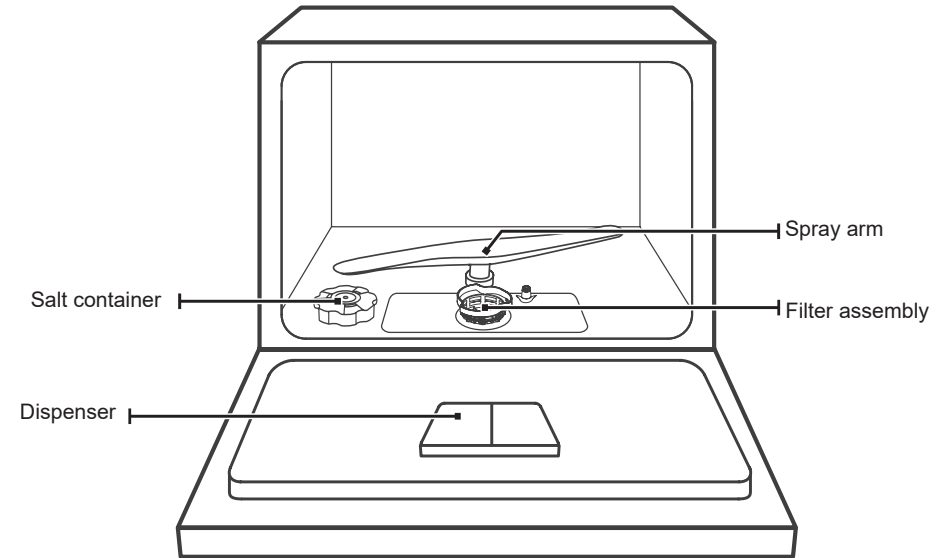

Cup rack

 Basket

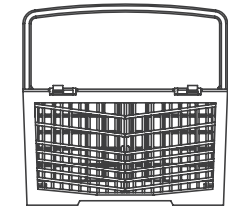







Cutlery rack



NOTE: Figures are for illustrative purposes only Individual models may vary.

 TABLE OF WASH PROGRAMMES: DIM12D6a

ITEM	Programme name	The default temperature [°C]	Type of soil	Amount of detergent	Type of cycle						Duration [min.] *	Power consumption [kWh] *	Water consumption [litres] *
1	Intensive 	70°	Heavily soiled dishes with dried food residue.	4g/10g (1 tablet)	Pre-wash 50°C	Wash 70°C	Rinse	Rinse	Rinse 60°C	Dry	135	0.790	9.6
2	Universal 	60°	For normally soiled crockery, such as pots, plates, glasses and lightly soiled pans.	4g/10g (1 tablet)	Pre-wash	Wash 60°C	Rinse	Rinse 60°C	Dry		110	0.580	7.7
3	**ECO 	45°	Lightly soiled glass-ware and porcelain.	4g/10g (1 tablet)	Pre-wash	Wash 45°C	Rinse 50°C	Dry			215	0.460	6.5
4	Glass 	45°	For lightly soiled crockery and glass.	14g (1 item)	Wash 45°C	Rinse	Rinse 50°C	Dry			70	0.400	5.8
5	Rapid 	45°	A short program for lightly dirty dishes that do not require drying.	12g (1 tablet)	Wash 45°C	Rinse	Rinse				20	0.308	7.0
6	90 min 	65°	For normally soiled loads that need quick wash.	14g (1 tablet)	Wash 65°C	Rinse	Rinse	Rinse 60°C	Dry		90	0.590	6.6

** Standard programme This is a reference program for research institutes. Tests according to EN EN60436. This programme is suitable for washing normally soiled tableware. This is the most effective programme taking into account the total energy and water consumption for this kind of tableware.

* Programme duration, energy and water consumption value given in the table have been determined under laboratory conditions. Actual values can vary.